


**Installation Manual for the**  
**SHURflo 902-200**  
**LCB - G Pump Controller**

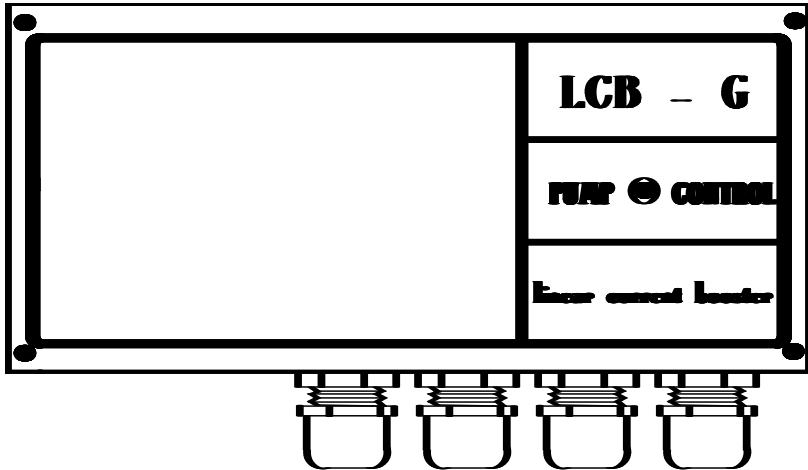

The "LCB - G" pump controller is a high quality DC power converter designed as an interface between a DC (Solar)-Pump (e.g. SHURflo 9300) and a DC power source, like solar panels, wind generators, batteries etc.. The main function of this controller is to maximize the daily water output while providing protection for the pump. The controller can be used in 12V and 24V systems.

The solid state controller will protect the pump system and give trouble free service for many years. When used in a solar pumping system, directly connected to the solar power, it will protect the pump from over voltage and over current conditions as well as will provide current boosting in low sunshine (radiation) conditions.

The manual will show you how to make the connection for your particular system configuration and the wiring diagram is given.

**SHURflo**

**INDUSTRIAL PRODUCTS LIMITED WARRANTY**

SHURflo Industrial series pumps and products are warranted to be free of defects in material and workmanship under normal use, for a period of one (1) year from the date of manufacture, or one (1) year of use, with proof of purchase. This limited warranty will not exceed two (2) years, in any event.

The limited warranty will not apply to pumps/products that were improperly installed, misapplied, damaged, altered, incompatible with fluids or components not manufactured by SHURflo.

All Industrial pumps/products **must** be flush of **any** chemicals before shipping\*. All warranty considerations are governed by SHURflo's written Return Policy.

Returns are to be shipped postage prepaid to either service center; SHURflo Garden Grove, CA or Elkhart, IN. SHURflo shall not be liable for freight damage incurred during shipping. Package returns carefully.

SHURflo's obligation under this warranty policy is limited to the repair or replacement of the pump/ product. All returns will be tested per SHURflo factory criteria. Products found not defective (under the terms of this limited warranty) are subject to charges paid by the returnee for the testing and packaging of "tested good" non-warranty returns.

No credit or labor allowances will be given for pumps or products returned as defective. Warranty replacements will be shipped on a freight allowed basis. SHURflo reserves the right to choose the method of transportation.

This limited warranty is in lieu of all other warranties, expressed or implied, and no other person is authorized to give any other warranty or assume obligation or liability on SHURflo's behalf. SHURflo shall not be liable for any labor, damage or other expense, nor shall SHURflo be liable for any indirect, incidental or consequential damages of any kind incurred by the reason of the use or sale of any defective product or part. This limited warranty covers industrial products distributed within the United States of America. Other world market areas should consult with the actual distributor for any deviation from this document.

**RETURN POLICY**

All industrial pumps/products **must** be flushed of **any** chemical (ref. OSHA Section 1910.1200(d)(e)(f)(g)(h)) and hazardous chemicals **must** be labeled / tagged before being shipped\* to SHURflo for service or warranty consideration. SHURflo reserves the right to request a Material Safety Data Sheet from the returnee for any pump/product it deems necessary. SHURflo reserves the right to "disposition as scrap" pumps/products returned which contain unknown fluids. SHURflo reserves the right to charge the returnee for any and all costs incurred for chemical testing, and proper disposal of components containing unknown fluids.

SHURflo request this in order to protect the environment and personnel from the hazards of handling unknown fluids. \* Carriers, including U.S.P.S., airlines, UPS, ground freight, etc., require specific identification of any hazardous materials to be shipped. Failure to do so may result in a substantial fine and/or prison term. Check with your shipping company for specific instructions.



\*ISO Certified Facility

**SHURflo**  
a WICOR Company

**SHURflo reserves the right to update specifications, prices, or make substitutions.**

**SHURflo ★**  
12650 Westminster Ave.  
Santa Ana, CA 92706-2100  
(800) 854-3218 (562) 795-5200  
FAX (562) 795-7554  
**Shipping/UPS:** 5900 Katella Avenue,  
Suite B, C, Cypress, CA 90630

**SHURflo East**  
52748 Park Six Court  
Elkhart, IN 46514-5427  
((800) 762-8094  
(219) 262-478  
FAX (219) 264-2169  
© 1999 Printed in USA

**SHURflo Ltd.**  
Unit 5 Sterling Park  
Gatwick Road, Crawley  
West Sussex, RH10 2QT  
United Kingdom  
+44 1293 424000  
FAX +44 1293 421880

## LCB - G Specification

* Maximum input voltage	45 VDC (Open Circuit) under all conditions
* Start up voltage with one module 17,5 mpp	12.5 V
* Start up voltage with two modules 17,5 mpp in series	25.0 V
* Maximum output voltage	29 volts
* Maximum power consumption of the PV-pump-system	150 Watts
* Maximum output current	7 Amps
* Power consumption	25 mA
* Fuse	10 Amps (optional inserted on the battery cable)
* Ambiente temperature	14°F - 113°F ( -10°C..+45°C )
* Short-circuit protection	

## Features

- 1) Current boosting for matching the load requirements of the pump motor.
- 2) Adjustable voltage of the starting point of the pump.
- 3) Weatherproof cast aluminum enclosure.
- 4) 4x water tight cable inlets
- 5) Voltage limiting for pump protection
- 6) Remote float switch circuit.
- 7) Low water cut off circuit with adjustable set points.
- 8) ON / OFF Pump switch (inside enclosure)
- 9) Power-in indicator (green LED, inside enclosure) ("ON", if the wiring from the panel is correct)
- 10) Pump-out indicator (red LED, outside)
- 11) One year limited warranty

## Power Matching of the Controller

For use on panel direct systems, the LCB Pump Controller is set to hold the voltage constant around the maximum power point of the panels, and match the electric requirements of the pump motor. The purpose for the matching of the electric conditions of the power source (MPP) with the consumer (load) is to maximize the daily output of the solar pumping system.

## Wiring the LCB Pump Controller

- a. Float switch (remote) ON/OFF Circuit is used to turn the pump on and off from a remote location, e.g. a float switch in a reservoir. (Short the two terminals to turn the pump off.) The resistant on the wire should not exceed 250 ohms.
- b. HIGH water level sensor turns the pump on. ( \* Mount the brass electrode below the static water level at the desired turn point.)
- c. LOW water level sensor turns the pump off. (Mount the brass electrode 1 foot above the ground sensor.
- d. GROUND or common water level sensor must be under water all times. Mount the electrode 1 foot (30cm) above the pump.

**\* The distance between the HIGH and GROUND sensor should not exceed 60cm**

**(2 feet). It depends on the water conductivity**

If more distance is required a test will give best results

- e. PV- (IN) Negative wire from the PV array.
- f. PV+ (IN) Positive wire from the PV array.
- g. PUMP- (OUT) Negative wire from the pump (load).
- h. PUMP+ (OUT) Positive wire from the pump (load).
- i. ON/OFF Switch MANUAL SWITCH turns the pump on / off.
- k. 12V/24V Switch select system voltage.  
**( present adjustment:25V )**

Switch no.		1	2	3	4
25 V solar direct	two modules in series " <b>direct</b> "	ON	OFF	OFF	OFF
22 V battery based	two batteries in series	OFF	ON	OFF	OFF
12.5V solar direct	one module " <b>direct</b> "	OFF	OFF	ON	OFF
11 V	one battery	OFF	OFF	OFF	ON

\* Note:

If the low water level circuit (HI/LOW/GRD) is not used, jumper wires must be connected all three terminals. Do not extend sensor wires more than 300 feet (100 m) total length

**IMPORTANT = Watch for the correct electric connection =  
IMPORTANT  
("+"/"- " cable connection)**

**DO NOT EXPOSE THE CONTROLLER INTO  
DIRECT SUNLIGHT**

## **Function of the LED**

- \* Green Light: The green LED is inside of the controller. If the wiring from the panel correct, the green light (LED) will be on.
- \* Red Light: The red LED is on the front side of the controller. The red light is on:
  - a. If the float switch (remote control) is on a high position and the reservoir is full (bridged).
  - b. If the water table inside the well is lowered to the level of the LOW sensor and the dry running protection of the pump is in function.

## **Battery Use**

If the LCB Pump Controller is used in conjunction with batteries and charge regulators, there must be a 10 A fuse on the cable to the battery.

- \* **IMPORTANT: Check for the correct cable ("+" /"-") connection!!**

## **Installation**

- 1) If installing on a post, you may use the included Bracket and screws.
- 2) Connect the PV-panel cable, while covering the solar modules against sunshine (radiation). Correct connection will be indicated by the GREEN LED.
- 3) Attach the HI/LOW/GRD sensors at the desired depth on the pressure pipe of the solar pump and the safety wire.
- 4) Connect the solar pump cable. Tighten carefully!
- 5) Test the function by switching the manual switch (inside enclosure, upper right corner) to the "ON" position some seconds.
- 6) Connect the sensor cable while using the black isolation tube. Insert all 3 wires through the isolation cable and then insert through the cable connector. Tighten carefully!! Follow the sequence of the sensor settings, HIGH-sensor to the HIGH-cable connector, etc.

### **IMPORTANT:**

**If the HI/LOW/GRD terminals are not used with level sensors they must be bridged. The RED LED is in function when there is a low water level.**


**Do not ground hot wire (+, -) but unit housing**

- 7) If required, connect the float switch with the terminals. "Bridged", Stops the pump "RED LED".

# WIRING DIAGRAM

## LCB-G

solar panel

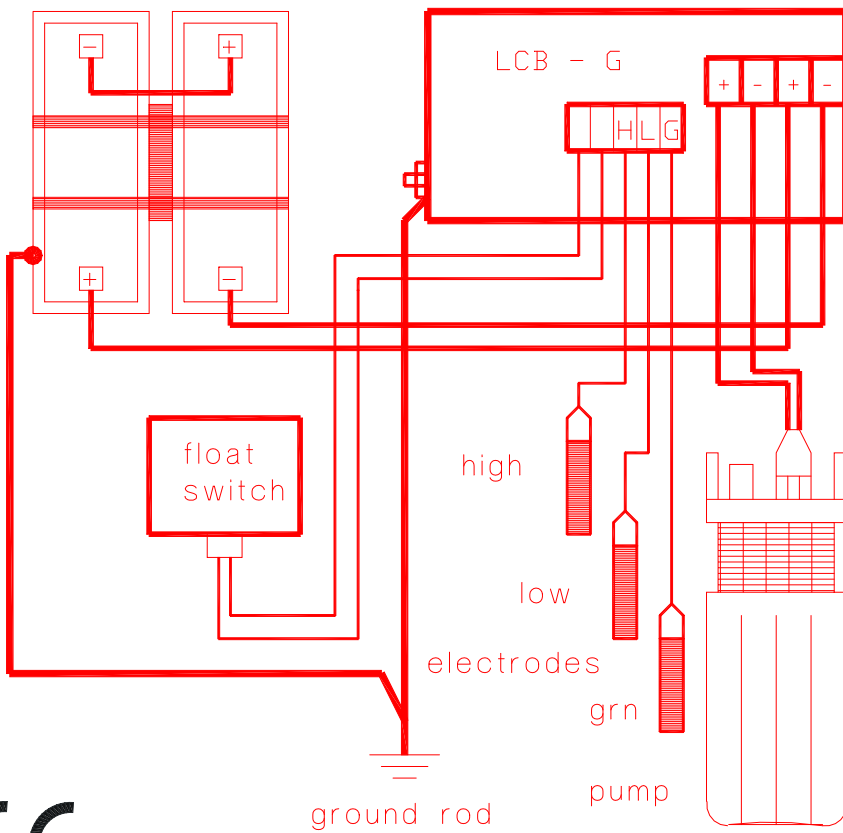

CE